

Each classroom has a computer that is connected to a projector to display teaching content. A wireless keyboard and mouse set is also provided to control the computer from across the room. Please **turn off the projector** and log out of the computer when you are done in a classroom.

Power on the projector with the power button

Ensure that the projector input is set to HDMI 1 using the HDMI button



Check that the switch is in the on position on the keyboard and the mouse




Many classrooms have an HDMI wallplate that will allow you to bring your own device to connect to the projector

Switch the projector to HDMI 2 to use this input



## The display isn't working:

- Make sure that the projector is powered on and set to the correct source
- Check that the **computer is on**
- Press + on the keyboard to bring up the display setting and set it to Duplicate
- **Restart** the computer

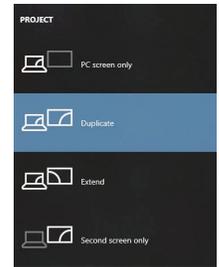

## The sound isn't working:

- Click on the speaker icon
- Make sure the **volume slider is up** and the projector is selected as the output
- The projector must be on for audio to pass through
- The second knob, labeled **Comp**, will **adjust the computer volume**



These are the Bass and Treble adjustments, they should usually stay in the middle

