

TV Operation – Ramaker Fireside Room

Overview:

The TV in the Ramaker Fireside Room can be used for viewing TV Stations, the computer located in the SE Corner media cabinet, or any other device that you would like to connect to an open input.

A JBL Sound Bar located above the TV should be used for optimal audio. Although the TV speakers will still function, AV Services recommends that you leave the TV sound off (set to level 0), and use the Sound Bar for your audio reinforcement. The Sound Bar is controlled by the small JBL Remote.

Operation:

Turn On the TV (Use the SHARP TV Remote, or press the Power button on the left side of the TV)

If the Source you need is not displayed, use “Input” on the SHARP TV Remote (or the left side of the TV) to select the following:

- PC (HDMI1) - for Computer or DVD's Played from Computer
- TV (or Press the channel button) - for TV Stations

Remember, use the small JBL Remote for adjusting volume of the Sound Bar. (If you're using the computer, you may also make adjustments with the computer's volume control.) If there is no sound from the sound bar, try pushing the “OPTICAL” button on the remote. (This is the Sound Bar Input that should be used for all sources.)

If playing a DVD from the Computer, load it into the disc drive, and select “VLC Media Player” to play your disc.

If you're watching TV and the stations will not change using the SHARP TV Remote, press the white “TV” button at the top of the remote, and try again. (Channels may also be changed on the left side of the TV.)

When finished using the TV, please Power Off and return the remote(s) to the top of the computer cabinet.